




**Distributore automatico di bevande**  
**Vending machine for hot beverages**  
**Heißgetränkeautomat**  
**Distributeur automatique de boissons**

**mod. SAECO DA 7P PLUS**

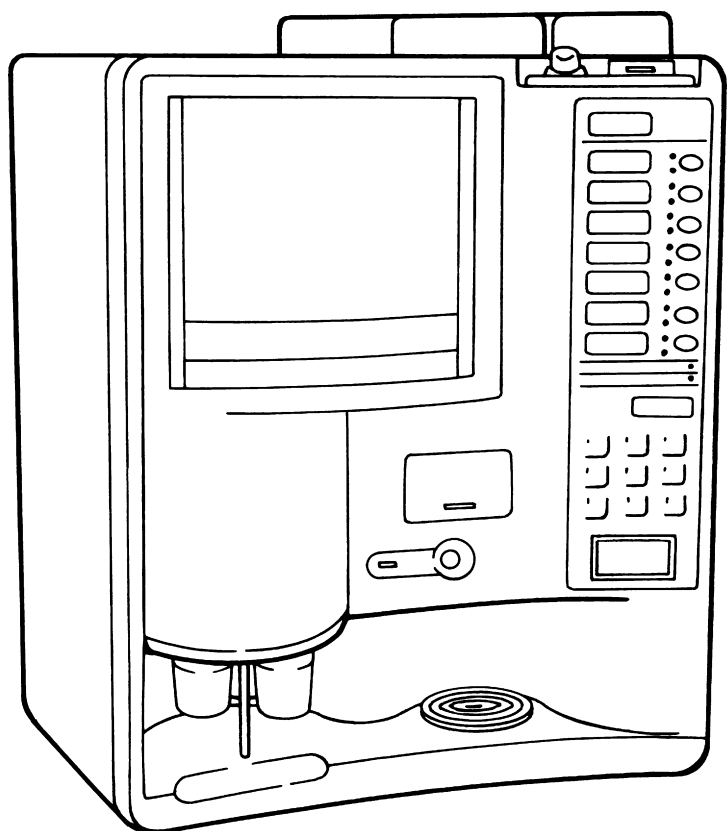

# INSTRUCTION FOR INSTALLATION AND USE

1 - Informazioni generali .....	5	7 - Comandi ed informazioni .....	7
2 - Avvertenze di sicurezza .....	5	8 - Installazione .....	8
3 - Avvertenze per facilitare la lettura .....	5	9 - Impiego e caricamento .....	14
4 - Caratteristiche tecniche .....	6	10 - Pulizia e manutenzione .....	14
5 - Marcatura ed identificazione .....	6	11 - Demolizione della macchina .....	18
6 - Immagazzinamento e disimballo .....	7		

1 - General information .....	19	7 - Controls .....	21
2 - Safety warnings .....	19	8 - Installation .....	22
3 - Symbols special attention .....	19	9 - Operation and re-filling products .....	28
4 - Technical specifications .....	20	10 - Cleaning and maintenance .....	29
5 - Label and identification .....	20	11 - Proper disposal of machine .....	31
6 - Storage and unpacking .....	21		

1 - Allgemeine Informationen .....	32	7 - Bedienungselemente und Informationen .....	34
2 - Sicherheitshinweise .....	32	8 - Aufstellung .....	35
3 - Hinweise zur Handhabung der Bedienungsanleitung ..	32	9 - Bedienung und Befüllung .....	41
4 - Eigenschaften, technische Daten .....	33	10 - Reinigung und Wartung .....	42
5 - Kennzeichnung und Identifikation .....	33	11 - Entsorgungshinweise .....	45
6 - Aufbewahrung und Auspacken .....	34		


1 - Données générales .....	46	7 - Commandes et instructions .....	48
2 - Normes de sécurité .....	46	8 - Installation .....	49
3 - Pour faciliter la lecture du présent manuel .....	46	9 - Emploi et remplissage .....	55
4 - Caractéristiques techniques .....	47	10 - Nettoyage et entretien .....	56
5 - Marquage et identification .....	47	11 - Destruction de la machine .....	59
6 - Stockage et déballage .....	48		

Comandi distributore automatico predisposto per monetiera tipo NRI G 13

Controls relevant to a vending machine suitable to a NRI G13 coiner

Bedienungselemente des Automaten, vorbereitet für den Einsatz eines Münzprüfers des Typs NRI G 13

Commandes distributeur automatique pour monnayeur de type NRI G 13

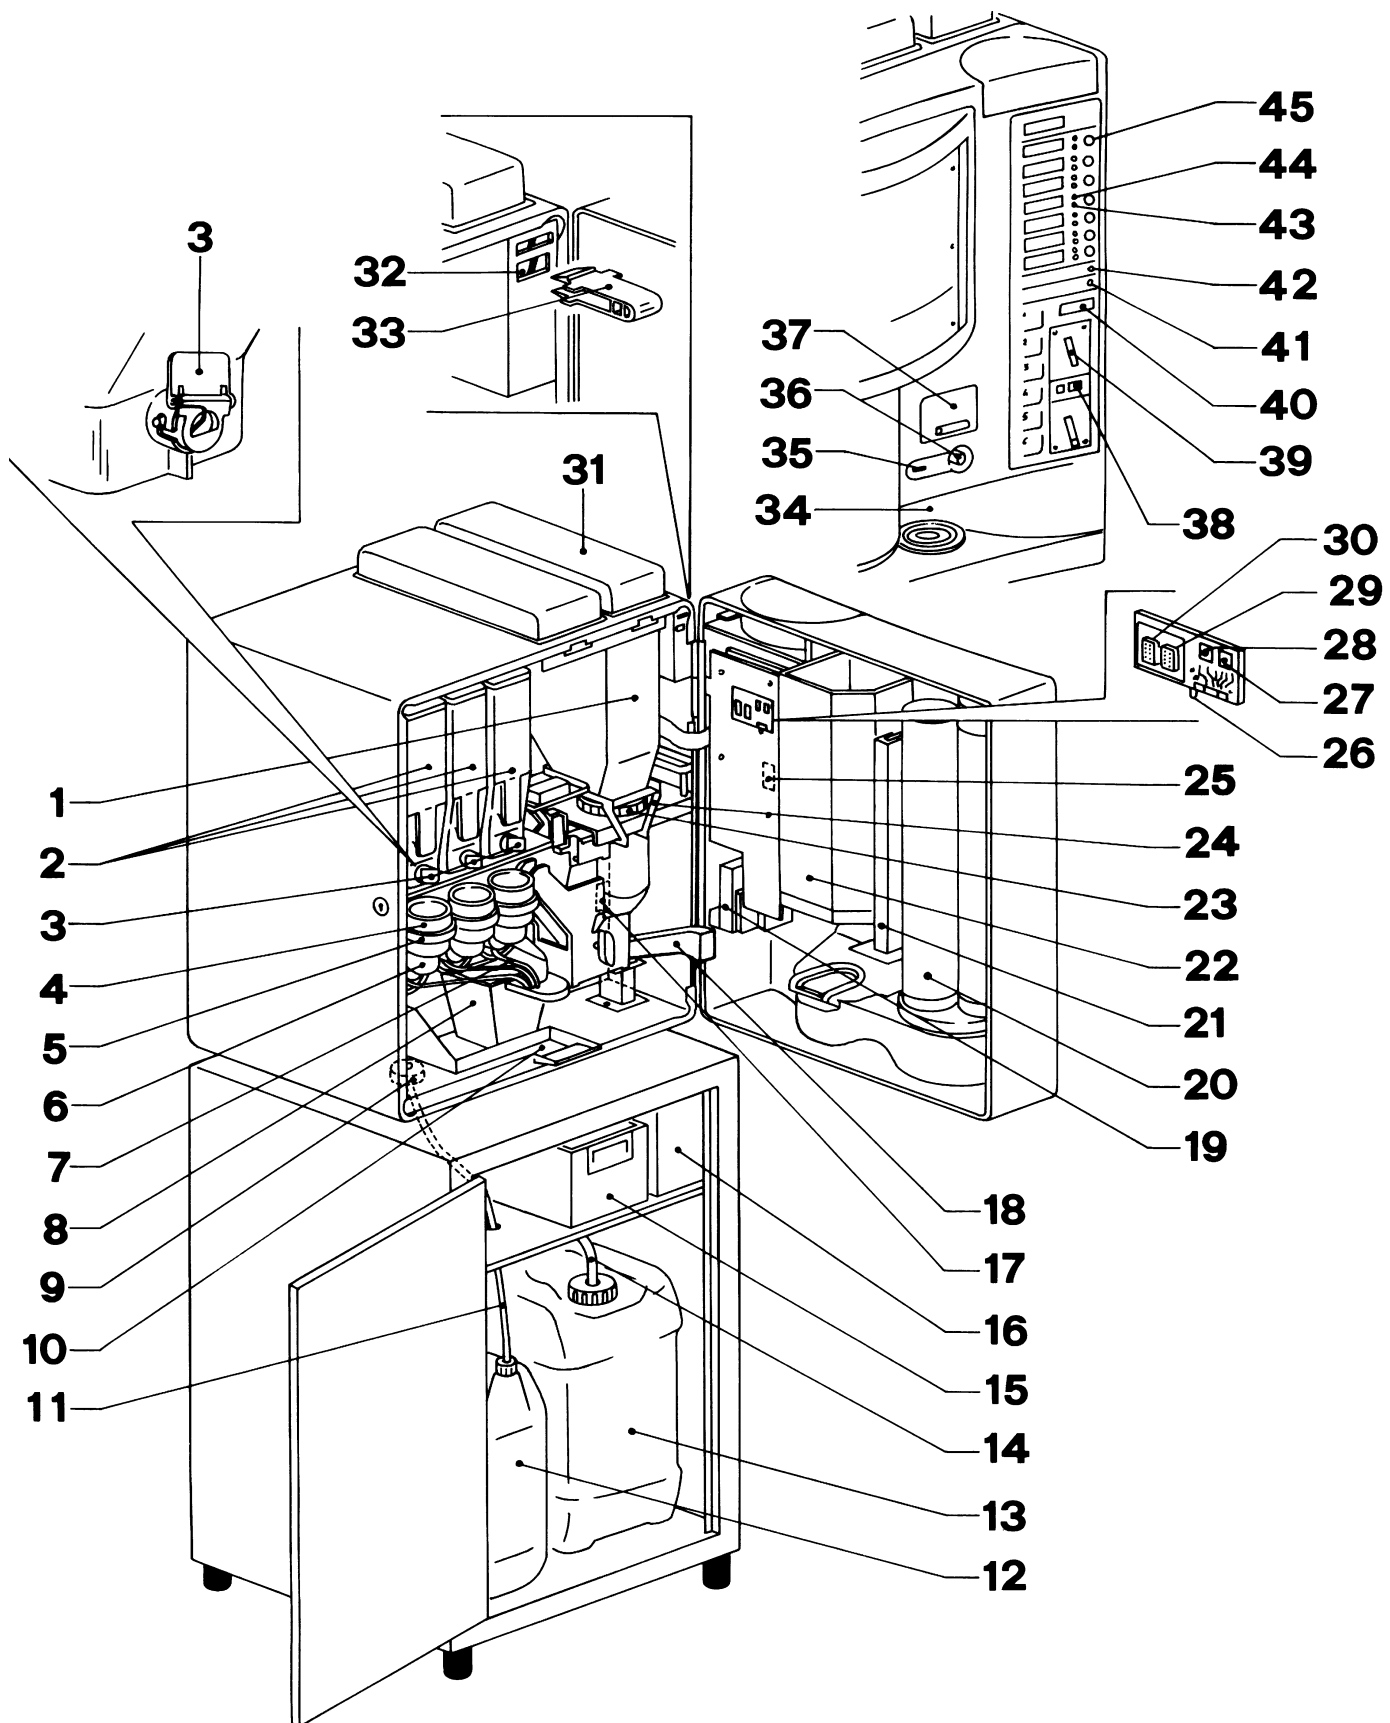


Comandi distributore automatico predisposto per monetiera tipo NRI G 26

Controls relevant to a vending machine suitable to a NRI G26 coiner

Bedienungselemente des Automaten, vorbereitet für den Einsatz eines Münzprüfers des Typs NRI G 26

Commandes distributeur automatique pour monnayeur de type NRI G 26

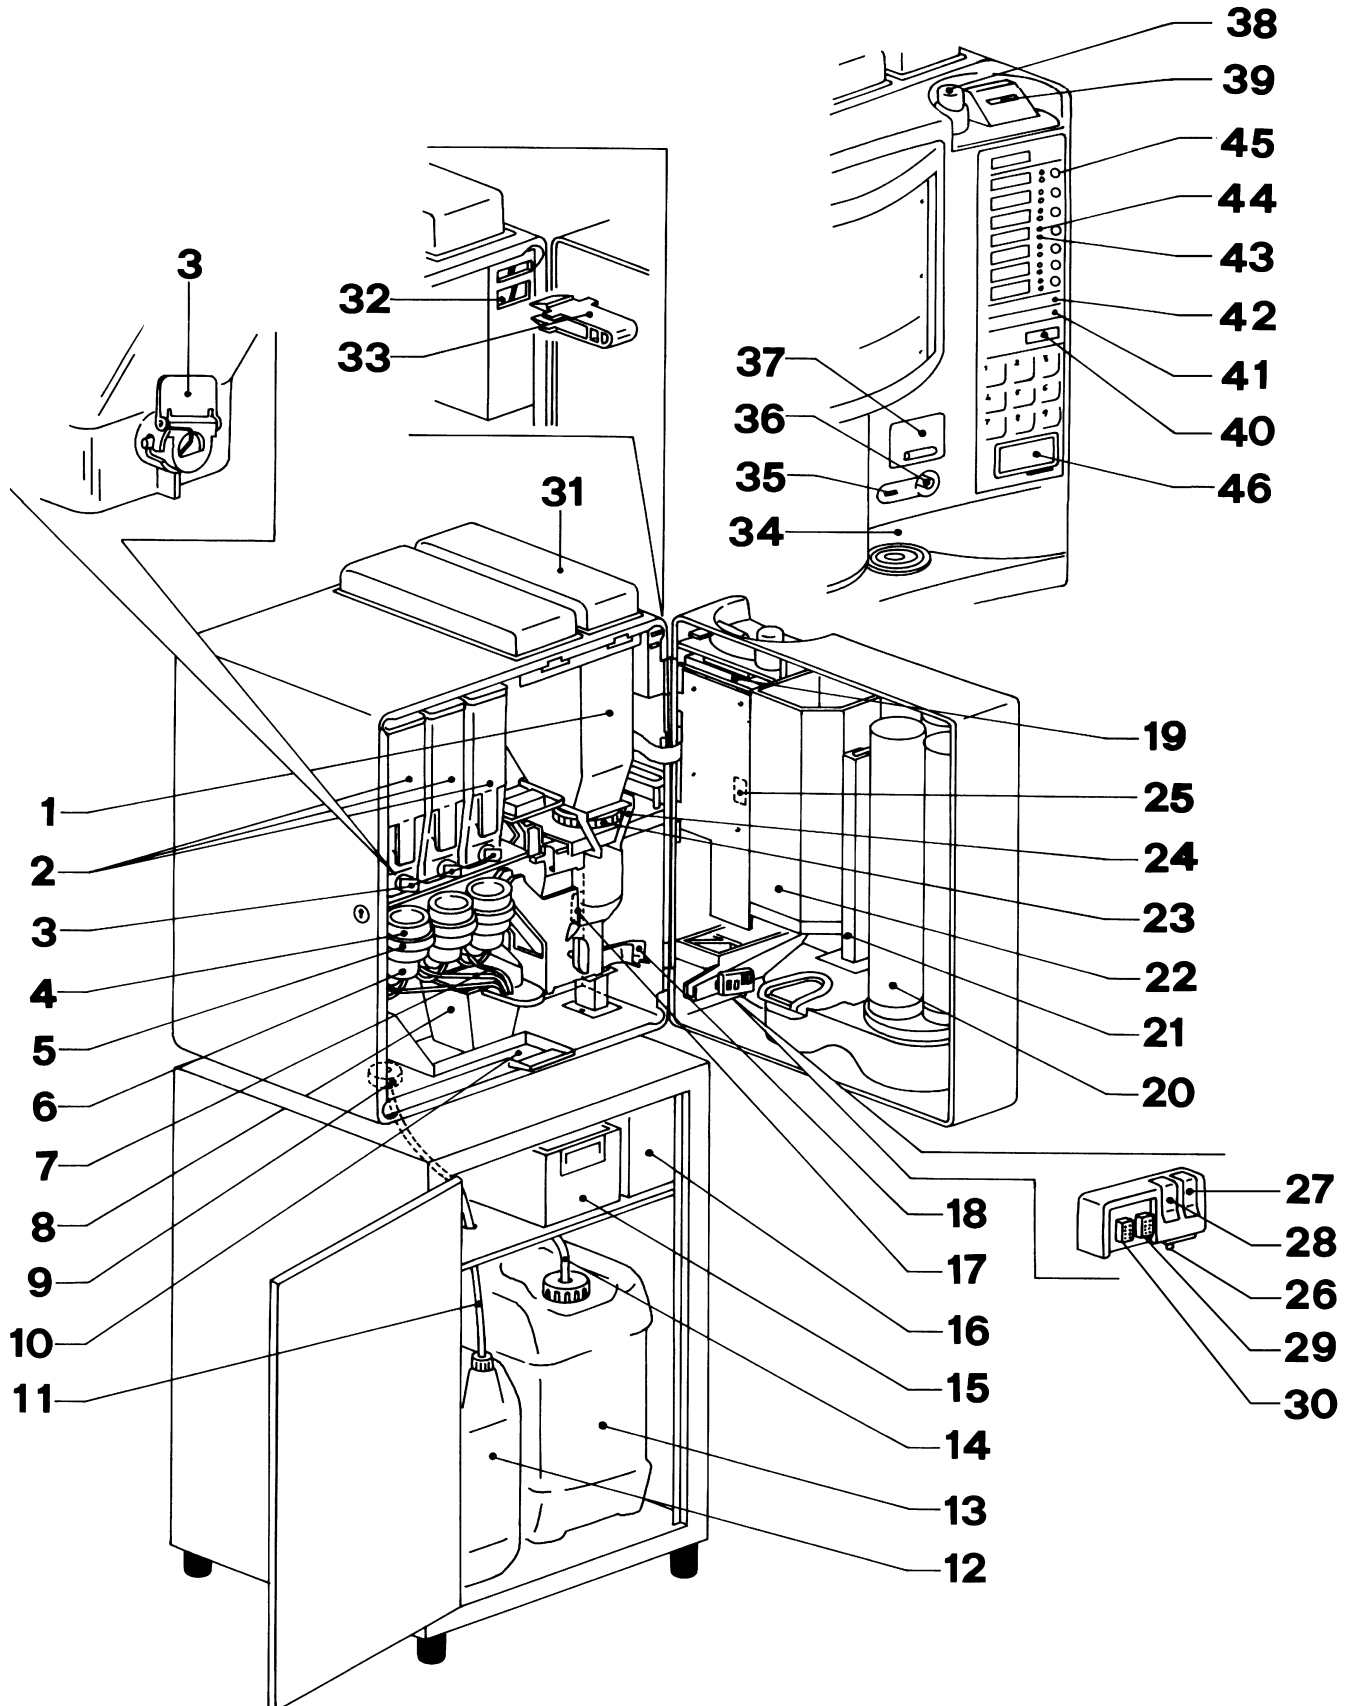

**Legenda Comandi distributore automatico predisposto per monetiera tipo NRI G 26****Italiano**

- |                                 |                                         |                                          |                                         |
|---------------------------------|-----------------------------------------|------------------------------------------|-----------------------------------------|
| 1. Contenitore caffè in grani   | 13. Tanica acqua potabile               | 25. Chiave nazione                       | 37. Sportello prelievo zucchero         |
| 2. Contenitori polveri          | 14. Tubo di scarico                     | 26. Pulsante programmazione              | 38. Pulsante recupero monete            |
| 3. Coperchi contenitori polveri | 15. Cassetto fondi                      | 27. Pulsante                             | 39. Apertura inserimento monete         |
| 4. Coperchio per imbuto         | 16. Cassetto moneta                     | 28. Pulsante per il "RESET"              | 40. Display                             |
| 5. Imbuto per polveri           | 17. Ponticello per lavaggio miscelatori | 29. Connettore per programmatore         | 41. Spia rossa "MANCA ACQUA"            |
| 6. Contenitore di miscelazione  | 18. Convogliatore per monete            | 30. Porta seriale                        | 42. Spia verde "PRONTO PER L'USO"       |
| 7. Tubi di erogazione           | 19. Monetiera tipo G 26                 | 31. Coperchio contenitore caffè in grani | 43. Spie rosse                          |
| 8. Tramoggia di scarico fondi   | 20. Tubi per bicchieri                  | 32. Apertura azionamento micro           | 44. Spie verdi                          |
| 9. Imbuto raccogliocce          | 21. Protezione per cucchiaini           | 33. Chiave per l'azionamento del micro   | 45. Pulsante di selezione della bevanda |
| 10. Vasca raccogliocce          | 22. Contenitore per bustine di zucchero | 34. Vano di erogazione                   | 46. Vano recupero monete                |
| 11. Tubo di scarico             | 23. Manopola di regolazione macinatura  | 35. Apertura distribuzione cucchiaini    |                                         |
| 12. Tanica di scarico           | 24. Paratia mobile                      | 36. Pulsante distributore cucchiaini     |                                         |

**Legend Controls relevant to a vending machine suitable to a NRI G26 coiner****English**

- |                               |                              |                              |                               |
|-------------------------------|------------------------------|------------------------------|-------------------------------|
| 1. Coffee bean hopper         | 13. Fresh water tank         | 25. Nation key               | 37. Sugar dispensing slot     |
| 2. Instant product bins       | 14. Filling tube             | 26. Programming button       | 38. Coin return button        |
| 3. Instant product bin covers | 15. Dump box                 | 27. Button                   | 39. Coin slot                 |
| 4. Whipper cap                | 16. Coin box                 | 28. "RESET" button           | 40. Display                   |
| 5. Instant product whipper    | 17. Automatic rinsing jumper | 29. Connector for programmer | 41. Red led "WATER EMPTY"     |
| 6. Mixing chamber             | 18. Coin conveyor            | 30. Serial port              | 42. Green led "READY FOR USE" |
| 7. Dispensing tubes           | 19. G 26 type coiner         | 31. Coffee hopper cover      | 43. Red leds                  |
| 8. Drip tank                  | 20. Cup tubes                | 32. Sensor switch            | 44. Green leds                |
| 9. Drip funnel                | 21. Stirrer container cover  | 33. Sensor operation key     | 45. Beverage selection button |
| 10. Drip tray                 | 22. Sugar packet dispenser   | 34. Dispensing point         | 46. Coin return slot          |
| 11. Drain tube                | 23. Grinder adjusting ring   | 35. Stirrer dispenser slot   |                               |
| 12. Drain tank                | 24. Closure slide            | 36. Stirrer dispenser button |                               |

**Legende Bedienungselemente des Automaten, vorbereitet für den Einsatz eines Münzprüfers des Typs NRI G 26****Deutsch**

- |                                      |                                               |                                                     |                                         |
|--------------------------------------|-----------------------------------------------|-----------------------------------------------------|-----------------------------------------|
| 1. Kaffeebohnenbehälter              | 14. Frischwasserschlauch                      | 26. Programmier Taste                               | 36. Knopf des Rührstäbchenspenders      |
| 2. Behälter für Instantgetränkpulver | 15. Satzschublade                             | 27. Spül-Taste                                      | 37. Zuckerentnahmefach                  |
| 3. Verschlussklappe Instantbehälter  | 16. Kasse                                     | 28. RESET-Taste                                     | 38. Münzrückgabetafel                   |
| 4. Trichterdeckel                    | 17. Schaltbrücke für die automatische Spülung | 29. Anschlußbuchse für die Programmierereinheit     | 39. Münzeinwurf Schlitz                 |
| 5. Pulvertrichter                    | 18. Münzschaft                                | 30. Serieller Anschluß                              | 40. Display                             |
| 6. Mischbehälter                     | 19. Münzwechsler G 26                         | 31. Deckel des Kaffeebohnenbehälters                | 41. Rote Kontrollampe "WASSER LEER"     |
| 7. Getränkeauslaufrohre              | 20. Becherspender                             | 32. Öffnung für die Betätigung des Mikroschalters   | 42. Grüne Kontrollampe "BETRIEBSBEREIT" |
| 8. Kaffeesatzbehälter                | 21. Abdeckung des Rührstäbchenspenders        | 33. Schlüssel für die Betätigung des Mikroschalters | 43. Rote Kontrollampen                  |
| 9. Trichter für Tropfwasser          | 22. Zuckerbeutelbehälter                      | 34. Getränkeausgaberaum                             | 44. Grüne Kontrollampen                 |
| 10. Abtropfschale                    | 23. Drehring für die Mahlgradeinstellung      | 35. Öffnung für Rührstäbchen                        | 45. Getränkewahl Taste                  |
| 11. Abflußschlauch                   | 24. Verschlusschieber                         |                                                     | 46. Münzrückgabefach                    |
| 12. Kanister für Tropfwasser         | 25. Nationenschlüssel                         |                                                     |                                         |

**Légende Commandes distributeur automatique pour monnayeur de type NRI G 26****Français**

- |                             |                                     |                                        |                                      |
|-----------------------------|-------------------------------------|----------------------------------------|--------------------------------------|
| 1. Réservoir café en grains | 13. Bidon eau potable               | 25. Clef nation                        | 37. Compartiment sucre               |
| 2. Bacs produits            | 14. Tuyau de remplissage            | 26. Bouton programmation               | 38. Bouton de retour pièces          |
| 3. Couvercles bacs produits | 15. Tiroir à marc                   | 27. Bouton                             | 39. Fente d'introduction de pièces   |
| 4. Couvercle d'entonnoir    | 16. Tiroir à pièces                 | 28. Bouton de "REMISE A ZERO"          | 40. Ecran                            |
| 5. Entonnoir à produits     | 17. Pont pour lavage mélangeurs     | 29. Connecteur pour programmeur        | 41. Voyant rouge "MANQUE D'EAU"      |
| 6. Récipient de mélange     | 18. Convoyeur pour pièces           | 30. Prise port série RS 232            | 42. Voyant vert "PRET POUR L'EMPLOI" |
| 7. Tuyaux de distribution   | 19. Monnayeur type G 26             | 31. Couvercle réservoir café en grains | 43. Voyants rouges                   |
| 8. Bac d'égouttement        | 20. Tubes porte-gobelets            | 32. Fente d'actionnement du micro      | 44. Voyants verts                    |
| 9. Entonnoir d'égouttement  | 21. Carter pour cuillères           | 33. Clef technicien                    | 45. Bouton de sélection boisson      |
| 10. Plat d'égouttement      | 22. Récipient pour sachets de sucre | 34. Plat de distribution               | 46. Retour pièces                    |
| 11. Tuyau de vidange        | 23. Bouton de réglage mouture       | 35. Fente de distribution cuillères    |                                      |
| 12. Bidon de vidange        | 24. Cloison mobile                  | 36. Bouton distributeur de cuillères   |                                      |

**Legenda Comandi distributore automatico predisposto per monetera tipo NRI G 13****Italiano**

- |                                 |                                         |                                          |                                         |
|---------------------------------|-----------------------------------------|------------------------------------------|-----------------------------------------|
| 1. Contenitore caffè in grani   | 13. Tanica acqua potabile               | 25. Chiave nazione                       | 37. Sportello prelievo zucchero         |
| 2. Contenitori polveri          | 14. Tubo di carico                      | 26. Pulsante programmazione              | 38. Pulsante recupero monete            |
| 3. Coperchi contenitori polveri | 15. Cassetto fondi                      | 27. Pulsante                             | 39. Apertura inserimento monete         |
| 4. Coperchio per imbuto         | 16. Cassetto moneta                     | 28. Pulsante per il "RESET"              | 40. Display                             |
| 5. Imbuto per polveri           | 17. Ponticello per lavaggio miscelatori | 29. Connettore per programmatore         | 41. Spia rossa "MANCA ACQUA"            |
| 6. Contenitore di miscelazione  | 18. Convogliatore per monete            | 30. Porta seriale                        | 42. Spia verde "PRONTO PER L'USO"       |
| 7. Tubi di erogazione           | 19. Monetera tipo G 13                  | 31. Coperchio contenitore caffè in grani | 43. Spie rosse                          |
| 8. Tramoggia di scarico fondi   | 20. Tubi per bicchieri                  | 32. Apertura azionamento micro           | 44. Spie verdi                          |
| 9. Imbuto raccogliocce          | 21. Protezione per cucchiaini           | 33. Chiave per l'azionamento del micro   | 45. Pulsante di selezione della bevanda |
| 10. Vasca raccogliocce          | 22. Contenitore per bustine di zucchero | 34. Vano di erogazione                   |                                         |
| 11. Tubo di scarico             | 23. Manopola di regolazione macinatura  | 35. Apertura distribuzione cucchiaini    |                                         |
| 12. Tanica di scarico           | 24. Paratia mobile                      | 36. Pulsante distributore cucchiaini     |                                         |

**Legend Controls relevant to a vending machine suitable to a NRI G13 coiner****English**

- |                               |                              |                              |                               |
|-------------------------------|------------------------------|------------------------------|-------------------------------|
| 1. Coffee bean hopper         | 13. Fresh water tank         | 25. Nation key               | 37. Sugar dispensing slot     |
| 2. Instant product bins       | 14. Pump suction tube        | 26. Programming button       | 38. Coin return button        |
| 3. Instant product bin covers | 15. Dump box                 | 27. Button                   | 39. Coin slot                 |
| 4. Whipper cap                | 16. Coin box                 | 28. "RESET" button           | 40. Display                   |
| 5. Instant product whipper    | 17. Automatic rinsing jumper | 29. Connector for programmer | 41. Red led "WATER EMPTY"     |
| 6. Mixing chamber             | 18. Coin conveyor            | 30. Serial port              | 42. Green led "READY FOR USE" |
| 7. Dispensing tubes           | 19. G 13 type coiner         | 31. Coffee bean hopper cover | 43. Red leds                  |
| 8. Drip tank                  | 20. Cup dispensing tubes     | 32. Sensor switch            | 44. Green leds                |
| 9. Drip funnel                | 21. Stirrer container cover  | 33. Sensor operation key     | 45. Beverage selection button |
| 10. Drip tray                 | 22. Sugar packet dispenser   | 34. Dispensing point         |                               |
| 11. Drain tube                | 23. Grinder adjusting ring   | 35. Stirrer dispenser slot   |                               |
| 12. Drain tank                | 24. Closure slide            | 36. Stirrer dispenser button |                               |

**Legende Bedienungselemente des Automaten, vorbereitet für den Einsatz eines Münzprüfers des Typs NRI G 13****Deutsch**

- |                                      |                                               |                                                     |                                          |
|--------------------------------------|-----------------------------------------------|-----------------------------------------------------|------------------------------------------|
| 1. Kaffeebohnenbehälter              | 14. Frischwasserschlauch                      | 26. Programmier Taste                               | 35. Öffnung für Rührstäbchen             |
| 2. Behälter für Instantgetränkpulver | 15. Satzschublade                             | 27. Spül-Taste                                      | 36. Knopf des Rührstäbchenspenders       |
| 3. Verschlussklappe Instantbehälter  | 16. Kasse                                     | 28. RESET-Taste                                     | 37. Zuckerentnahmefach                   |
| 4. Trichterdeckel                    | 17. Schaltbrücke für die automatische Spülung | 29. Anschlußbuchse für die Programmierereinheit     | 38. Münzrückgabetaaste                   |
| 5. Pulvertrichter                    | 18. Münzschacht                               | 30. Serieller Anschluß                              | 39. Münzeinwurfschlitz                   |
| 6. Mischbehälter                     | 19. Münzprüfer G 13                           | 31. Deckel des Kaffeebohnenbehälters                | 40. Display                              |
| 7. Getränkeauslaufrohre              | 20. Becherspender                             | 32. Öffnung für die Betätigung des Mikroschalters   | 41. Rote Kontrolllampe "WASSER LEER"     |
| 8. Kaffeesatzbehälter                | 21. Abdeckung des Rührstäbchenspenders        | 33. Schlüssel für die Betätigung des Mikroschalters | 42. Grüne Kontrolllampe "BETRIEBSBEREIT" |
| 9. Trichter für Tropfwasser          | 22. Zuckerbeutelbehälter                      | 34. Getränkeausgaberaum                             | 43. Rote Kontrolllampen                  |
| 10. Abtropfschale                    | 23. Drehring für die Mahlgradeinstellung      |                                                     | 44. Grüne Kontrolllampen                 |
| 11. Abflußschlauch                   | 24. Verschlusschieber                         |                                                     | 45. Getränkewahltaaste                   |
| 12. Kanister für Tropfwasser         | 25. Nationenschlüssel                         |                                                     |                                          |


**Légende Commandes distributeur automatique pour monnayeur de type NRI G 13****Français**

- |                             |                                     |                                        |                                      |
|-----------------------------|-------------------------------------|----------------------------------------|--------------------------------------|
| 1. Réservoir café en grains | 13. Bidon eau potable               | 25. Clef nation                        | 37. Compartiment sucre               |
| 2. Bacs produits            | 14. Tuyau de remplissage            | 26. Bouton programmation               | 38. Bouton de retour pièces          |
| 3. Couvercles bacs produits | 15. Tiroir à marc                   | 27. Bouton                             | 39. Fente d'introduction de pièces   |
| 4. Couvercle d'entonnoir    | 16. Tiroir à pièces                 | 28. Bouton de "REMISE A ZERO"          | 40. Ecran digital                    |
| 5. Entonnoir à produits     | 17. Etrier pour lavage mixeurs      | 29. Connecteur pour programmatore      | 41. Voyant rouge "MANQUE D'EAU"      |
| 6. Récipient de mélange     | 18. Goulotte-pièces                 | 30. Prise port série RS 232            | 42. Voyant vert "PRET POUR L'EMPLOI" |
| 7. Tuyaux de distribution   | 19. Monnayeur type G 13             | 31. Couvercle réservoir café en grains | 43. Voyants rouges                   |
| 8. Bac marc                 | 20. Tubes porte-gobelets            | 32. Fente d'azionement du micro        | 44. Voyants verts                    |
| 9. Entonnoir à égouttures   | 21. Carter pour cuillères           | 33. Clef de technicien                 | 45. Bouton de sélection boisson      |
| 10. Bac égouttures          | 22. Récipient pour sachets de sucre | 34. Grille pour gobelets               |                                      |
| 11. Tuyau de vidange        | 23. Bouton de réglage mouture       | 35. Fente de distribution cuillères    |                                      |
| 12. Bidon eaux usées        | 24. Cloison mobile                  | 36. Bouton distributeur de cuillères   |                                      |

# "DA 7P PLUS" HOT BEVERAGE VENDING MACHINE

## 1 - GENERAL INFORMATION

- This manual provides all technical information necessary for the correct installation, maintenance and operation of the machine.
- Always consult this manual before carrying out any operation or procedure.
- Do not discard this manual. Keep it for future reference.
- This manual is of the utmost importance to operators, therefore it should always be kept with the equipment.

 **ATTENTION**  
To allow a better understanding of the technical information, the machine has been described and shown with its own floor cabinet.  
Customers are reminded that the floor cabinet is an optional accessory supplied upon request.

## 2 - SAFETY WARNINGS

 **Always turn off the machine before carrying out any procedure inside the machine.**


- **Do not unscrew the back cover of the machine. Components inside the back cover of the machine should not be tampered with by the user.**  
Should it be necessary, call your distributor (see the last page of the manual for contact information).
- Routine operations and cleaning can be performed by trained personnel, according to the regulations in force.
- The coin acceptor is not incorporated into the manufacturing process of the machine at the factory. The coin acceptor is assembled onto the machine by the import distributor or the local distributor upon special request.  
The manufacturer declines any liability for damages to the equipment or to people resulting from a faulty installation of the payment system. The installer shall be directly liable.
- The machine must be installed in a closed, dry, dust-free location, with a temperature ranging between 10 and 40° C.
- A general maintenance check should be carried out once a year by skilled personnel who should test the equipment and its compliance with the current local codes.


### Handling

- During handling and transportation, the machine must be kept in an upright position, according to the instructions printed on the box.
- Handle the machine carefully during loading and unloading operations.
- Lift the machine by the handles fitted on the side of the box.
- Do not lift the machine with forklift clamps.
- Do not shake the equipment.

 **Do not pour water or other fluids over the machine, and do not immerse the machine in water.**

## 3 - SPECIAL ATTENTION SYMBOLS

 The warning triangle highlights safety instructions.  
Pay particular attention to the instructions following a warning triangle.

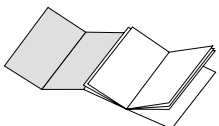

The first page shows figures relevant to the text. Always keep it open for reference while reading the operating instructions.

Numbers or letters indicate corresponding figures, controls and machine components.


 This symbol shows messages requiring particular attention.

**4 - TECHNICAL SPECIFICATIONS**

- The DA 7 PLUS vending machine is designed to automatically dispense coffee and hot beverages. It offers the selection of 7 different beverages, obtained either through the brewing of freshly ground coffee beans or soluble products.




Beverages should be consumed shortly after dispensing; they should not be preserved and/or packed. This machine should be supplied exclusively with products suitable for vending machines. Beverages should be dispensed in open containers (cups).

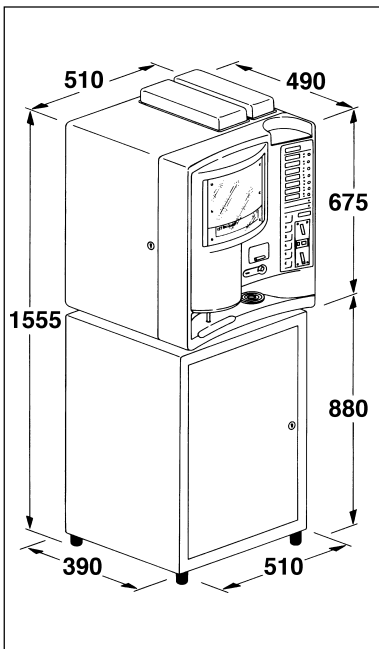

G 13 Model

Fig. 1

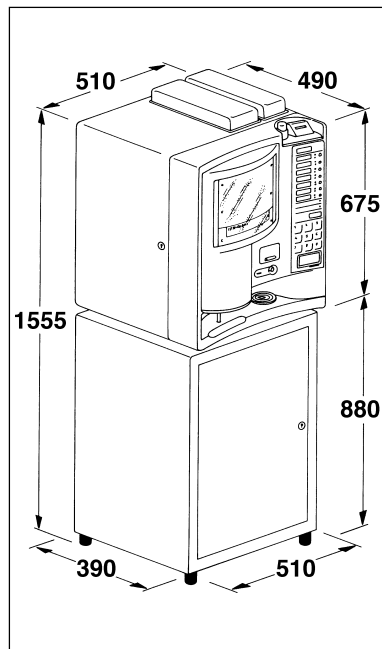

G 26 Model

Fig. 2

Dimensions .....	See Figure 1
.....	See Figure 2
Equipment weight .....	42 kg
Cabinet weight .....	22 kg
Nominal power .....	see rating plate on the back of the machine
Nominal current .....	see rating plate on the back of the machine
Cable length .....	150 cm
Water supply .....	Internal water tank with a capacity of 20l, or cold-water line connection, with a water pressure ranging between 1 and 8 bar


**Capacities**

Coffee beans .....	1,6 kg
Soluble products .....	0,8-2 kg
Stirrers .....	N° 220
Cups .....	N° 240
Sugar packets .....	N° 250

**4.1 Payment system**

- DA 7P PLUS vending machine has been manufactured to accept the assembly of either the PARALLEL TYPE NRI G 13 coiner, G26 EXECUTIVE coiner, or other payment systems, such as SAECO CARD and banknote readers. Saeco Card will be supplied with a kit and assembly instructions.

**5 - LABEL AND IDENTIFICATION**

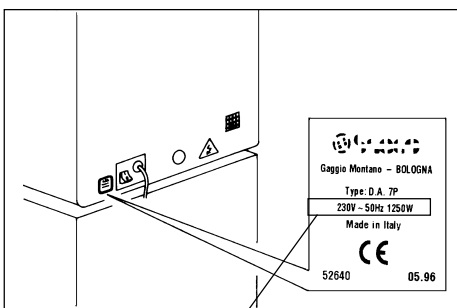

Voltage rating and nominal power for the proper functioning of the machine

Fig. 3

- The serial number of the equipment is found inside the machine on the top right side; the same number can also be found on the rating plate. The rating plate (see figure) must not be removed or damaged, since all information relevant to the machine is printed on it, thus allowing the manufacturer to obtain certain information. The voltage and power requirement for the machine can also be found on the rating plate.

**6 - STORAGE AND UNPACKING**

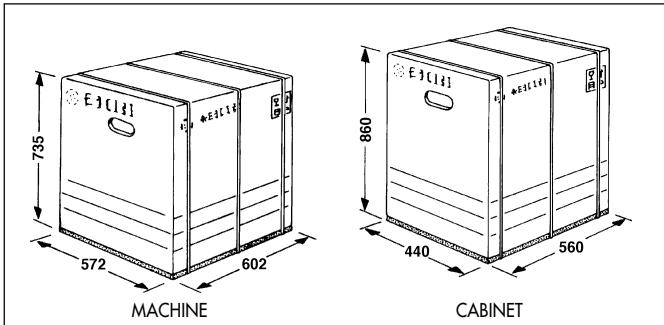


Fig. 4

**Storage**

- The machine is packed into a sturdy cardboard box with a reinforced platform, as shown in figure 4. The boxed machine can be stored in cool, dry, dust-free locations.

**Warning :** Do not stack more than one box on top of another.

**Unpacking**

- Place the boxed machine on the installation site, cut the straps and remove the box. If the machine was delivered with its optional matching cabinet, unpack and assemble the cabinet. Make sure that the floor is flat, dry, and able to withstand the weights of the machine and cabinet. Check the contents of the accessories bag,


usually found in the dump box of the machine. Remove the bag.

**List of accessories supplied :**


- Cup reduction ring Ø 58 mm (Paragraph 9.2)
- Safety sensor key (Paragraph 10)
- G 13 coin conveyor supplied with coin channel, fastening screws and nuts (Paragraph 8.2)
- G 26 coin conveyor supplied with coin channel, fastening screws and nuts (Paragraph 8.2)
- No. 4 fastening screws and nuts for the coiner (Paragraph 8.6)
- No. 1 metal adhesive cable stopper for the G 26 coiner cables (paragraph 8.7)
- Product labels, adhesive price labels and operating instruction label (Paragraph 8.9)
- No. 1 brew group key (Paragraph 10)
- No. 1 whipper fan key (Paragraph 10.2)
- No. 1 nation key (paragraph 8.4)
- No. 1 operating and maintenance manual
- No. 1 graphic image (Paragraph 8.9)

**7 - CONTROLS**

**Controls**

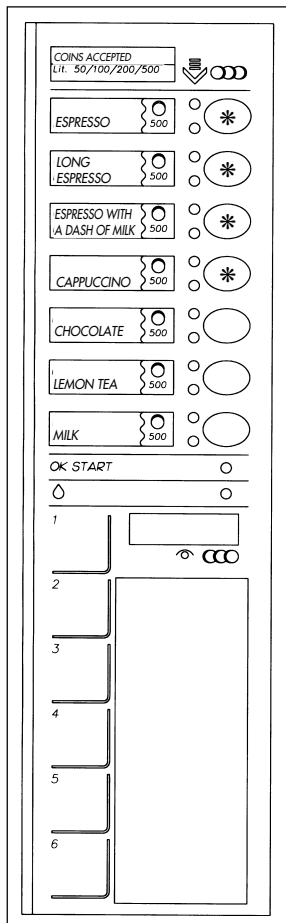

G 13 Model

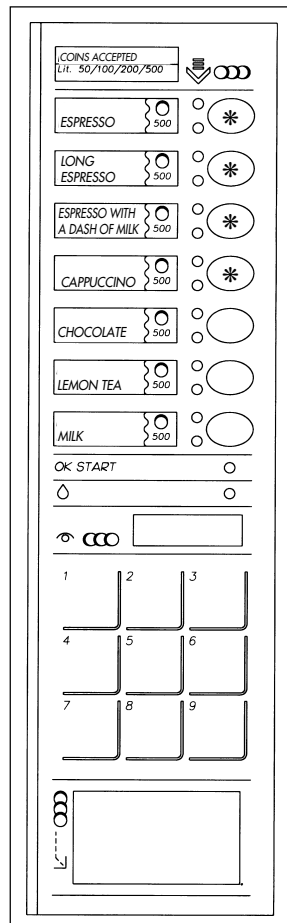

G 26 Model

Fig. 5

Fig. 5

- **Main switch:** on the backside of the machine, bottom right (Fig. 3-7).
- **Selection panel:** consists of 7 buttons (45) corresponding to the number of beverages, identified respectively as A - B - C - D - E - F - G (fig. 5).
- **Display (40):** shows the sum of the coins inserted.
- **Green LEDs (44)** beside the beverage selection buttons : they turn on when the corresponding selected beverage can be dispensed (i.e. when coins inserted reach or exceed the price shown).  
**N.B.** Should the machine be programmed to dispense beverages free of charge, the green LEDs will always be on.
- **Red LEDs (43)** beside the beverage selection buttons : they turn on when the corresponding beverage is empty.
- **Green LED (42) "READY FOR USE":** Shows the machine is ready to operate. The green leds light up intermittently.
- **Red LED (41) "WATER EMPTY":** Shows the machine cannot operate because the water tank is empty.
- **Coin return button (38):** Press the button for coin return, or if applicable, for change.
- **Stirrer dispenser button (36):** Press the button to dispense a stirrer (35).



The machine can be programmed to set both the coin value and the price.

The first 4 buttons (highlighted by the \* symbol) are used for programming operations; entered data are shown on the display 40.

For additional instructions, see paragraph 8.6.

## 8 - INSTALLATION

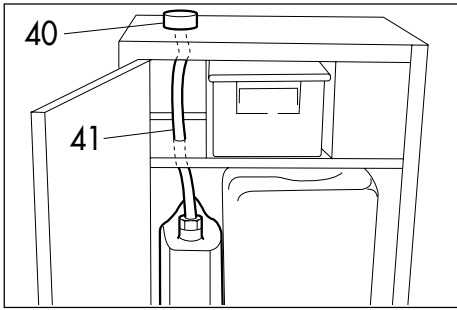


Fig. 6

- Remove the cabinet from the box, taking out all parts packed inside it.
- Insert the drip funnel (40) into the surface of the cabinet and connect it to the drain tube (41) (Fig. 6).
- Insert the end of the drain tube into the drain tank.



**WARNING:** Strong magnetic fields as well as electrical equipment generating strong noises and located nearby the machine might cause trouble to the electronic control.

### 8.1 Preliminary operations

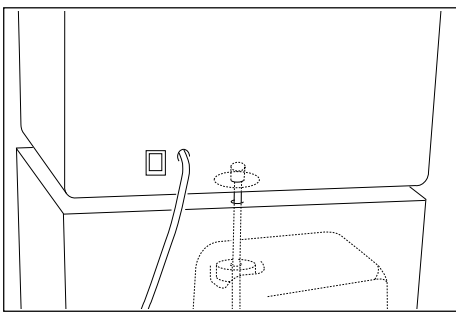


Fig. 7

- Make sure the machine is delivered in its original box, closed by straps to avoid tampering during transport. Remove the machine from its original box ; keep the box for future use. Comply with current local environmental codes if the box is discarded. Place the machine on top of the cabinet. To meet ventilation requirements, it is advisable to position the equipment so that there is a minimum distance of 8 cm between the back of the machine and the wall.
- Insert the suction tube contained in the cabinet into the connection fitted under the equipment (Fig. 7).
- Fill the 20 l tank with fresh, cold water, then insert the tube into the tank plug.
- Remove the plug in the drip tray by carefully punching the plug out (Fig. 8) ; make sure the hole is aligned with the drip funnel.

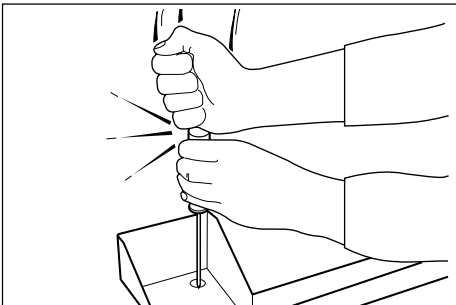


Fig. 8

### 8.2 Water connection (for machine directly connected to cold water line only)


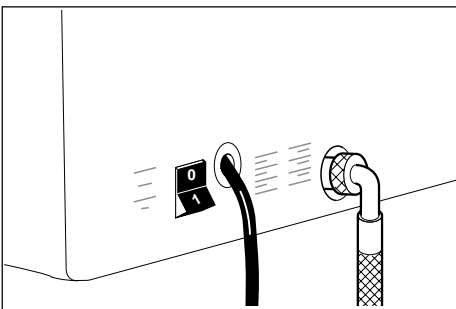


Fig. 9


Connect the machine to a water main, whose pressure is between 1.5 and 8 bar. Use a suitable filling tube and connect it to the G 3/4" coupling fitted on the rear panel of the machine (Fig. 9).

- Place dump box extension (8) over hole cutout on the bottom of the equipment. Angular side should face brew group (Fig. 10).
- Fit the coin conveyor (18) into the recess and fasten it with supplied screws, washers and nuts (Fig. 10).

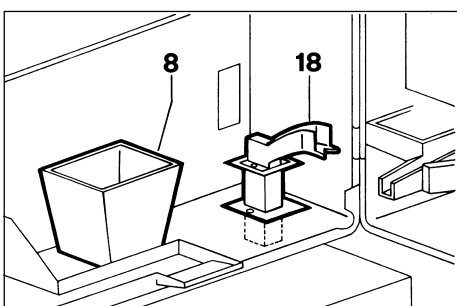

G 26 Model

Fig. 10

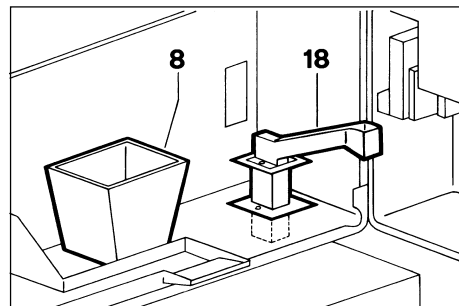

G 13 Model

Fig. 10




The equipment is supplied with the specific conveyor suitable to the coiner.

### 8.3 Electrical connection

The equipment has been manufactured for a single-phase voltage, as shown on the rating plate (Fig. 3).

**Before plugging in the machine, make sure that :**

-  **1. The rating plate specifications correspond to the electrical supply voltage (within a tolerance of approx. 10% from the rated value).**
- 2. The machine has a dedicated circuit that meets all the requirements necessary to support the maximum load.**

Make sure the machine is correctly grounded.

The electric system must comply with the current safety regulations and electrical codes. Refer to an electrician if there is any doubt about the electrical system

-  Never use extension cords or adapters.

### 8.4 Inserting the nation key

-  **When inserting this key, make sure the machine is turned off (position "0") and the power cord is unplugged.**

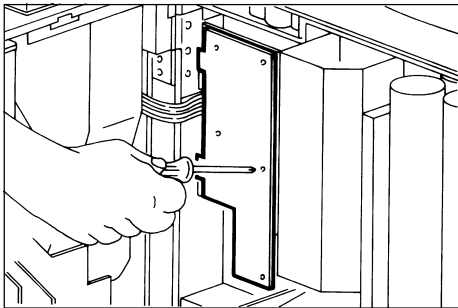


Fig. 11

- When inserted, the NATION KEY allows the programming of the following data:
  - 1) Min. and max. coin values
  - 2) Min. and max. prices
  - 3) Fifth display digit (ITALIA equipment only).
 The above mentioned specifications can also be found on the label of the accessories case.

 **The machine will not operate unless the NATION KEY has been previously inserted.**

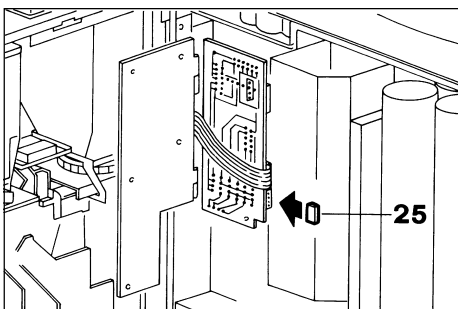


Fig. 12

- To insert key, remove the three screws fastening the coin plate and turn the latter (Fig. 11) in order to gain access to the connector fitted on the selection panel board. The key must be inserted into this connector fitted on the selection panel board (Fig.12).

### 8.5 Initial operating procedure

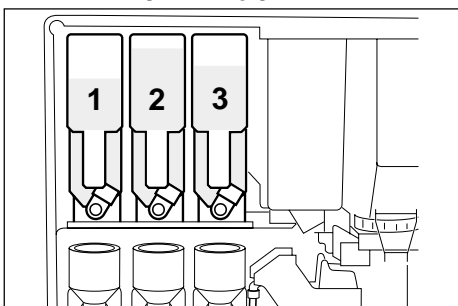


Fig. 13

#### Filling watertank :

- Fill the cabinet water tank (except for models supplied with direct water line connection), the bean hopper (1) and instant product bins (2), making sure the latter do not exceed the 2/3 of their max. capacity; replace them properly (Pos. 1 tea or other instant products, Pos. 2 chocolate or other instant products, Pos. 3 milk) (Fig. 13).

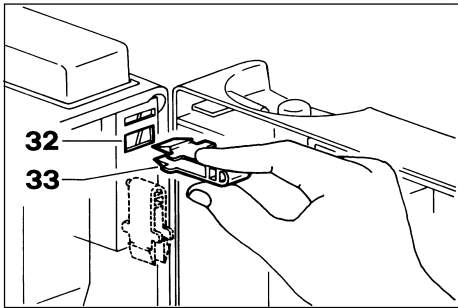


Fig. 14

- Turn the machine on (main switch on back of the machine to position "1"), then run a rinse cycle through the water system, following the procedure below :
- Open the door and insert key (33) into slot (32) enabling safety sensors (Fig. 14).



**WARNING:** Although the front door of the machine is open, the key (33) enables the machine to remain in operating mode. Refer to authorized service personnel or use extreme caution when carrying out all procedures with the opened door.

**Priming :**

- Keep button (27) pressed until a regular jet of water streams out of one of the dispensing tubes (7).

**Grinder adjustment :**

- The grinder can be adjusted to one of the following suggested values by turning the grinder adjusting ring (23) (Fig. 15):

Italy: 4-7 Spain: 5-8 France - Switzerland: 5-8  
Germany - Austria: 6-9 USA - Canada: 6-14

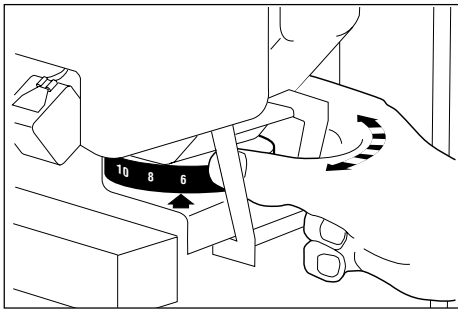


Fig. 15

- To check beverage dispensing quality insert coins, press the button corresponding to the desired beverage, and wait until beverage has been dispensed. Should coffee be dispensed too slowly, adjust the grinder to a coarser setting ; should coffee be dispensed too quickly, adjust the grinder to a finer setting (lower numbers=finer grind / higher numbers = coarser grind).

Attention : following the grinder adjustment, brew at least two coffees to evaluate the change.

- Make sure the instant product bin latches are open, remove the safety key (33) and close the door.
- Wait until the green LED "Ready for use" comes on.

 **All machine data, including beverage counts, system data, etc. can be obtained with use of the handheld 7P Programmer. The 7P Programmer is an accessory and must be purchased separately.**

**8.6 Assembly of the PARALLEL NRI G 13 coiner**

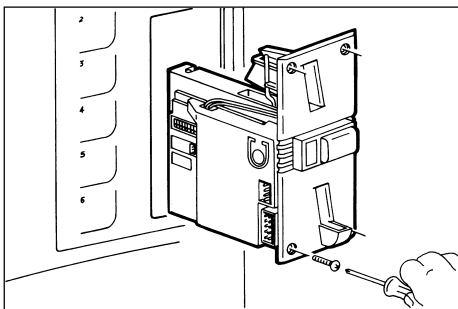


Fig. 16

 **Only a parallel type coiner can be used with this equipment.**

- Remove the front adhesive panel on the door covering the coiner recess.
- Fasten the coiner to the door with the 4 screws and nuts supplied (Fig. 16).
- Connect the flat cable to the coiner (Fig. 17).
- To prevent the coiner from accepting a type of programmed coin, push up the corresponding dip-switch (46) (Fig. 17).

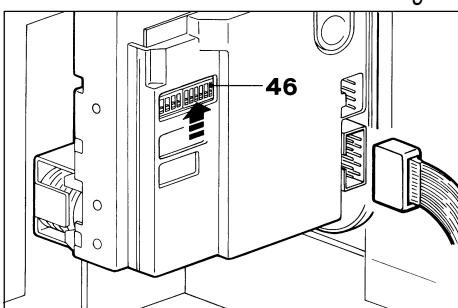


Fig. 17

Once the coiner has been assembled, program the channel coin values and prices according to the following instructions :

- Press button (26), which activates the programming mode. The machine will not dispense beverages. To perform programming operations, use the first four buttons on the front panel. Data menu changes can be read from the display. Symbols showing the button functions have been placed beside the corresponding button.

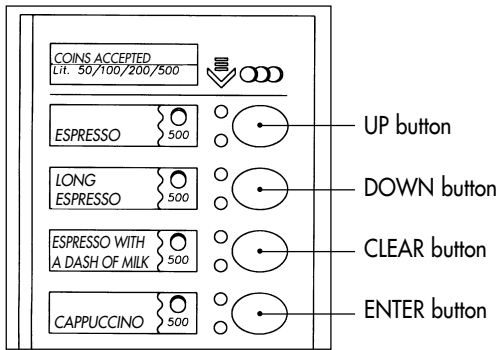


Fig. 18

### Button functions

1st BUTTON (UP button) : It is used to scroll up the menus and to increase the values displayed during programming.

2nd BUTTON (DOWN button) : It is used to scroll down the menus and to reduce the values displayed during programming.

3rd BUTTON (CLEAR button) : It is used to return to main programming menu 000. If pressed during the programming mode, it reduces the value displayed to its minimum.

4th BUTTON (ENTER button) : It is used to display the values contained in the various menus, which can then be modified using the UP and DOWN buttons. The same button is used to enter any changes. By pressing this button from the initial menu 000, it is possible to exit the programming mode and the machine will be ready to dispense beverages.

### Programming mode

To enter the programming menu, press button 26. The display reads 000. Beverage dispensing or any other machine function is no longer possible. The machine will automatically exit the programming mode if it has been idle for about 1 minute and return to beverage dispensing mode.

### Programming menu configuration

Values can be programmed in the following menus:

000 Power on/power off menu. It is accessed by pressing button 26 ; access to the other menus is possible using the UP button. To quit this menu, press the ENTER button.

001 Price 1 (low price) menu. By pressing the ENTER button from this menu, the price 1 value is shown and can be modified.

002 Price 2 (high price) menu. By pressing the ENTER button from this menu, the price 2 value is shown and can be modified.

A-1 Channel 1 coin value menu. By pressing the ENTER button from this menu, the value of the coin accepted by the coiner channel 1 is shown and can be modified.

A-2 Channel 2 coin value menu. By pressing the ENTER button from this menu, the value of the coin accepted by the coiner channel 2 is shown and can be modified.


A-3 Channel 3 coin value menu. By pressing the ENTER button from this menu, the value of the coin accepted by the coiner channel 3 is shown and can be modified.

A-4 Channel 4 coin value menu. By pressing the ENTER button from this menu, the value of the coin accepted by the coiner channel 4 is shown and can be modified.

A-5 Channel 5 coin value menu. By pressing the ENTER button from this menu, the value of the coin accepted by the coiner channel 5 is shown and can be modified.

A-6 Channel 6 coin value menu. By pressing the ENTER button from this menu, the value of the coin accepted by the coiner channel 6 is shown and can be modified.

U Multi-product dispensing menu. This menu activates the standard or multi-product dispensing mode. By pressing the ENTER button, the display reads 0, showing the standard dispensing mode. By pressing the UP button, the display reads 1, activating the multi-product dispensing mode.

 **With G13 coiners, the DA7P PLUS machine can be activated both into the multi-product dispensing and standard dispensing mode. With G26 coiners, the DA7P PLUS can be activated into multi-product dispensing mode only. When installing SaecoCard, the equipment automatically sets to the multi-product dispensing.**

### Exit programming

Programming can be exited by pressing the ENTER button from the 000 menu. To enter the 000 menu, use either the DOWN button to scroll down menu by menu, or the CLEAR button to have immediate access from any other menu to the 000 menu.

### Selling price programming

Program price 2 first and then price 1.

From the 000 menu, press the UP button twice. The display will show 002.

Press the ENTER button to display and be able to modify the price 2 value.

By pressing the UP button, the value will be changed from 000 to the minimum coin value pre-set by the nation key corresponding to the country of usage.

After entering the required value, press ENTER to confirm. The entered value is stored in the system memory and the display automatically shows 002 again.

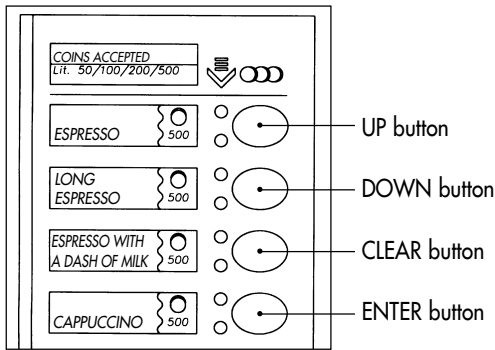


Fig. 18

To program price 1, press the DOWN button. The display will show 001. Press the ENTER button to display and modify the price 1 value.

Follow the same procedure to modify price 2, if desired.

To set the value to 000, press the CLEAR button. Should the machine be programmed to have two different prices, price 1 should always be lower than or equal to price 2.

If a few products will be dispensed free-of-charge and others will have prices, program by assigning a free-vend value 000 to price 1 and the required payment value to price 2; then use the machine programmer to assign price 1 to the free-of-charge products.

To program the machine to have one price only, enter the same value for both price 1 and price 2, then use the machine programmer to program all the products to have

either price 1 or price 2. The machine will automatically set both price 1 and price 2 to 000; therefore, if the two values are not changed, the machine will continue to dispense only free-of-charge products.

### Price "2" programming example

- Press the UP button. The message 000 is displayed.
- Press the UP button twice. The display will show the menu 2 (price 2).
- Press the ENTER button. The display will show 000.
- Press the UP button. The display will show the lowest possible setting.
- Press the UP button until the required value is reached (e.g. 800).
- Press the ENTER button to save the value. The display will show menu 2 again.
- Press the CLEAR button to go back to the initial menu.
- Press ENTER to quit the programming mode.

**To assign the beverage price, use the 7P Programmer.**

### Programming the coin value

**The coin value must be changed according to the coiner programming.**

Set the values relevant to each coin recognised by the coiner (see the table on the coiner), according to the limits set forth on the label of the nation key envelope. To program values, follow the procedure below :

- From the 000 menu, press the UP button to move to the A-1 menu.
- Press the ENTER button to display and modify the value of the coin accepted by coiner channel 1.
- By pressing the UP button, the displayed value is increased; it is decreased by pressing the DOWN button.
- After having set the required value, press ENTER to confirm. The value is stored and A-1 is automatically displayed again.
- In order to program the channel 2 coin value, press the UP button; the display will show A-2.
- Press ENTER to display and modify the value of the coin accepted by channel 2.
- The CLEAR button may be pressed to set the value to the smallest coin accepted by the coiner. The equipment is pre-set to the coin values shown on the coiner data plate. Tokens are assigned a value which is equal to that of the smallest coin accepted by the coiner.



**The RS 232 male serial connector (30) is used to operate SAECO CARD only.**

## 8.7 Assembly of the NRI G26 coin changer

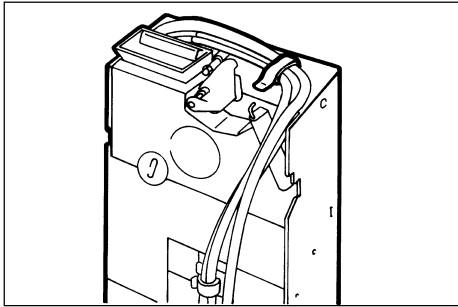


Fig. 19

 **Only an executive type coiner can be used with this equipment.**

- Assemble the metal cable stopper supplied with the equipment.
- Pass the coiner cables through the cable stopper, making sure they do not block the coin inlet or prevent the correct operation of the coiner release lever (Fig. 19).
- Fasten the coiner to the relevant plate with the three pins already fitted on the plate. Keep the coiner release lever pressed to make the coiner fitting easier (Fig. 20).
- Connect the 2 coiner cables supplied with connectors to the cables already fitted on the machine.

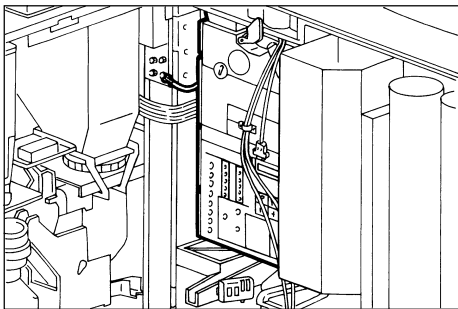


Fig. 20


The third coiner cable with serial connection is not currently used. When the coiner has been assembled, program sale prices according to the procedure previously described above for the G13 coiner.

The coiner channels have been pre-set for coin values. The user does not need to program these values.

 **This coiner is automatically programmed in the MULTI-PRODUCT dispensing function, as previously described (menu "U").**


For further information relevant to the coiner, see the instruction manual of the coiner.

## 8.8 Connecting the Personal Computer to the Machine (Fig. 21)

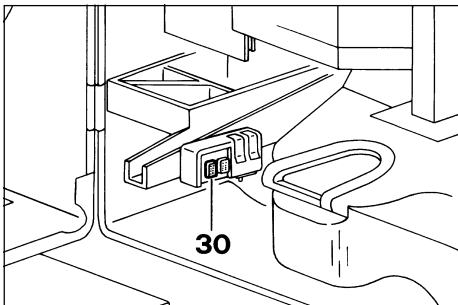

G 26 model serial port

Fig. 21

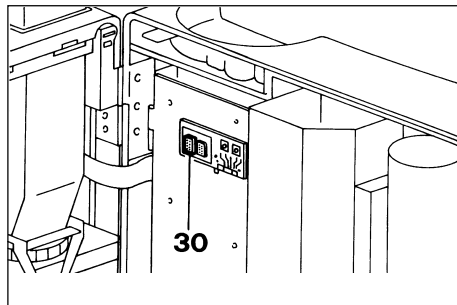

G 13 model serial port

Fig. 21

Please note: Special software is required. To connect a PC to the machine, use a 3-wire (inverting) serial connection cable, equipped with two 9-pole connectors.

Make sure both the machine and the PC are off, then carry out the cable connection, through the serial port 30, shown in Fig. 21.

Start the machine first and then the PC; this will establish a connection and enable real-time data exchange.

## 8.9 Inserting labels

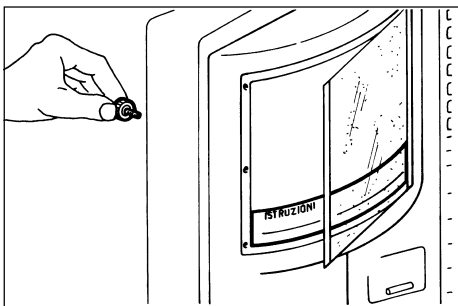


Fig. 22

Separate product labels along the perforations. Stick the adhesive price labels on the product labels. Slide labels into their proper positions. Remove frame knobs, lift the transparent panel (Fig. 22) and insert the graphics. Instructions to operate the equipment should be applied below the graphic.

## 9 - OPERATION AND RE-FILLING PRODUCTS

### 9.1 Beverage dispensing

- Insert the correct amount of change (40) corresponding to the price of the beverage selected.
- If coins inserted (39) exceed the amount required, the surplus amount will be stored for approx. 3 minutes and can be used for another beverage (with G13 multi-product dispensing coiner).  
For G 13 coiner without multi-product dispensing function insert only correct amount of coins. If the equipment is supplied with a coin changer, the change can be recovered by pressing button (38).
- Take a cup and position it at the dispensing point (34).
- Press the button corresponding to the desired beverage.
- Take the sugar packet out of the sugar dispenser (37) and the stirrer by pressing button (36).



**Warning:** Do not remove cup until the green ready light is on again.

### 9.2 Re-filling products

- As needed, re-fill the instant products, coffee beans, water (if using internal tank), stirrers, cups and sugar packets.

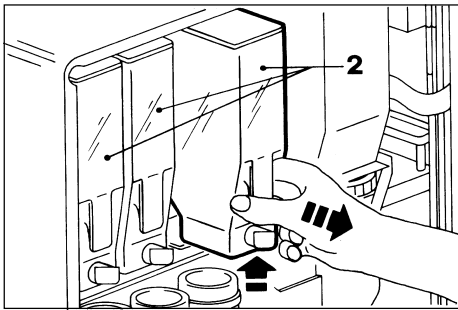


Fig. 23

#### Instant product bins:

- Close bin latches.
- Remove bins (2) from their housing (Fig. 23)
- Fill with instant product; do not exceed 2/3 of the max. capacity of the bins.
- Replace covers and replace bins into their housing, making sure they are properly positioned (Fig. 13).

#### Water tank:

- Remove water tank (13) by accessing the top of the machine
- Fill it with fresh, cold water and replace it, making sure it is properly positioned.

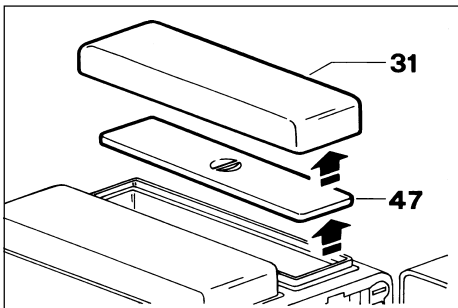


Fig. 24

#### Bean hopper:

- Lift the top cover (31) and the hopper cover (47) (Fig. 24) and fill the hopper (1) with coffee beans.

**Attention:** Do not fill with ground or instant coffee.

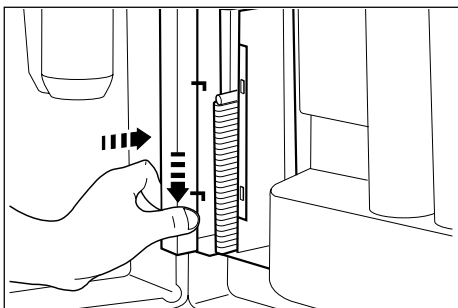


Fig. 25

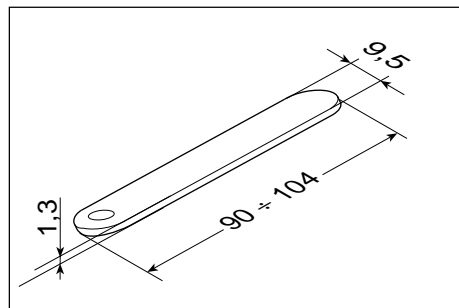


Fig. 26

#### Stirrer dispenser:

- Open front door.
- Remove the stirrer container cover (21) and the metal weight.
- Fill with perfectly aligned stirrers, replace the weight and the cover (Fig. 25)
- Close door and check proper functioning by pressing button to dispense a stirrer.

**Warning:** The stirrer dispensing device works exclusively with the type of stirrers shown in figure 26. The use of even slightly different stirrers may cause jamming.

#### Cup dispenser:

- Place cups in the tubes (20) fitted on the interior side of the door.

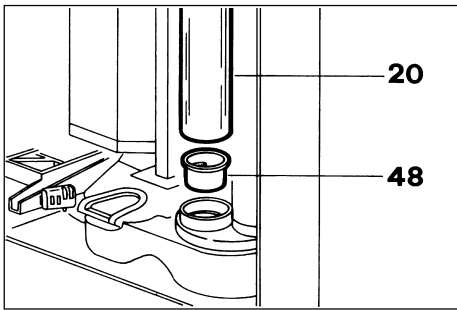


Fig. 27

**Attention: Cup tubes** have dimensions suitable for cups with a max. diameter of 70 mm; cups having a diameter of 58 mm (fig. 27) can also be used by inserting the necessary reduction rings (48).

**Sugar packet dispenser:**

- Fill the dispenser fitted on the inside of the door with sugar packets.

**Attention:** Do not use loose sweetener (i.e. sugar cubes). Use only packets.

### 9.3 Stop counter reset

- Electronic counters stop the beverage dispensing before the product (i.e. coffee, instant products, water) runs out if stop values have been programmed. Data has to be entered with the 7P Programmer. Stop values of 000 disable the stop function.
- Therefore, it is advisable to reset the counters with the 7P Programmer (see the relevant manual) immediately after the machine has been re-filled with products.

### 9.4 Troubleshooting

- Red LEDs will advise when products need re-filling :
- **Red LED "Water empty" on:** the machine has run out of water, thus preventing beverages from being dispensed. Fill the tank and, by keeping button 28 pressed, operate button 27 until water streams out of the dispensing tubes. This procedure primes the system. When the red LED is off, the machine is ready to dispense beverages again.
- **Red A-B-C-D beverage LEDs on:** the machine has run out of coffee beans, thus preventing the corresponding beverages from being dispensed. Fill the bean hopper and, by keeping button 28 pressed, press any A-B-C-D beverage button. When the LEDs are off, the machine is ready to work again.
- **Red E or F beverage LEDs on:** the machine has run out of the instant product corresponding to the LED, thus preventing the machine from dispensing the beverage. Fill the bin with product and, by keeping button 28 pressed, press the button corresponding to the led. When the LED is off, the machine is ready to work again.

## 10 - CLEANING AND MAINTENANCE

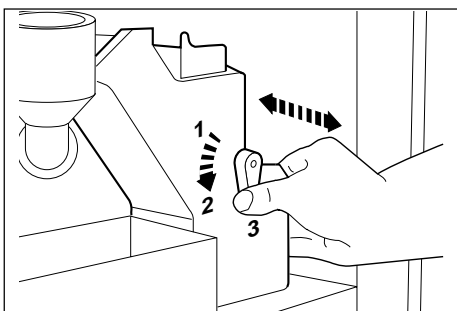






Fig. 28

 Before cleaning, turn the machine off (position "0") and unplug the cord.


 Do not clean or service the machine if the safety key (33) is still in place. Remove the safety key.

 **Rinse above mentioned parts** with clean, hot water. Do not use detergents or abrasive sponges.

- To obtain the maximum quality of the dispensed beverages and ensure the best operation of the equipment, follow the cleaning and maintenance procedure bellow:

 **Warning:** Exercise caution when using the key to adjust the brew group.

- Brew group:
- Remove the brew group by pressing down and keeping the lever on position 3 (Fig. 28). Rinse the brew group with warm water, dry it thoroughly and replace it thoroughly, always holding the lever on position 3. The brew group should fit snugly into place with a slight clicking sound.

 **Warning:** When replacing the brew group, make sure the timing arrows are aligned; otherwise, re-align them by using the key (Fig. 29).

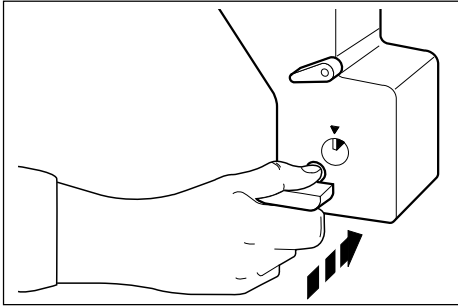


Fig. 29

#### Mixers and dispensing tubes:

- Remove the dispensing tubes (7) paying particular attention to the end gaskets. Remove the whipper cap (4) and separate the whipper (5) from the underlying part, also removing the nozzle with silicone tube (Fig. 30). Turn the whipper chamber (6) clockwise and remove it. Clean the mixing fan with a non-abrasive sponge soaked with lukewarm water, without exerting excessive pressure which might damage the sealing gasket.
- Rinse thoroughly with warm water all parts and replace them, carrying out the above mentioned operations in reverse order. Pay particular attention when assembling the nozzle with silicone tube, making sure it has been properly fitted.

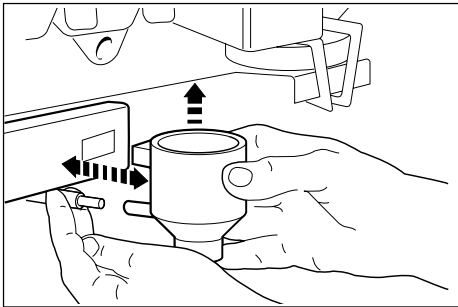


Fig. 30

#### Instant product bins:

- Instant product bins do not require particular maintenance. Nevertheless it is advisable to thoroughly clean them at least once a month, making sure they are thoroughly dry when filling them. Bins can be separated from the front and rear bushes by turning the latter counterclockwise, thus allowing the removal of both the rear pin and spring. Clean with a dry cloth or compressed air and replace by carrying out the above mentioned operations in reverse order, making sure the sealing ring of the rear pin has not been damaged.

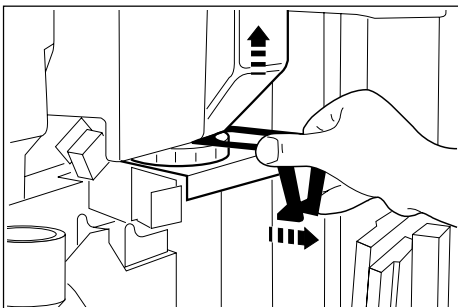


Fig. 31

#### Coffee hopper:

- Coffee hopper must be periodically cleaned in order to remove any accumulated oil deposited by beans. Pull the closure slide outwards (24) to prevent coffee from spilling out (fig. 31) around. Remove the hopper from its housing, rinse it with lukewarm water, dry and replace it.
- Fill it with coffee beans and push the closure slide inwards.

#### Cabinet water tank:

- The water tank has to be emptied and cleaned any time you proceed to product filling.

- Rinse the following parts with lukewarm water : drip funnel (9), dump box (15), drip tray (10), dispensing point (34) with drain tank (12). Thoroughly dry all parts before replacing them.

 **The manufacturer declines any liability whatsoever for machine malfunctioning resulting from incorrect or poor maintenance.**

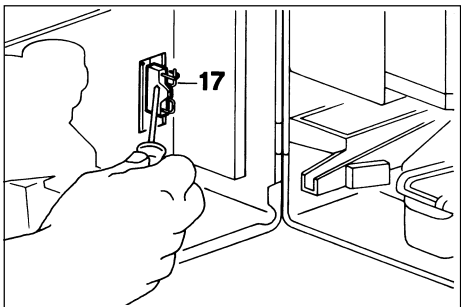


Fig. 32

- Automatic rinsing cycle:
- The machine can be programmed with an automatic rinsing program which rinses hot water through all the lines. The period of time between rinses can be programmed (see the 7P programmer manual). This function can be enabled by closing the jumper (17) on the electronic board (see the enlargement of Fig. 32).



**Warning:** Danger of electric shock: before carrying out the above procedure, make sure the machine is turned off and the power cord is unplugged.

## 10.1 Auxiliary functions

- The machine is supplied with some additional controls allowing operations to :
- **Test front panel LEDs.**
- **Descalc hydraulic circuit.**
- **Adjust the specific weight of the soluble products.**

#### Access to special controls:



**Warning:** The procedure below disables the safety sensor when the door is open. The machine will still be powered on and mechanical components could be activated. It is therefore important that the procedure be carried out by trained personnel only.

- Switch off the machine, open the door, introduce key 33 into the sensor switch, and then simultaneously turn on the machine and press button 28. The first 5 LEDs will light up, and the "Ready for use" and "Water empty" LEDs will alternately blink.

### Front panel LEDs check:

- Once the "access to special controls" procedure has been performed, press the first selection button (beverage A). One by one, the buttons next to the green LEDs will light up. As soon as the test has been completed, all red LEDs next to the buttons will light up.

### Descaling (machine supplied with water tank only):

- Fill the water tank with approx. 1 l of water mixed with a descaling solution and approved for food-service use. Follow the mixing instructions printed on the package of descaling solution.
- Once the "Access to special controls" procedure has been performed, press the second selection button (beverage B) to activate the descaling cycle.
- The solution is automatically pumped into the boiler (400 cc. approx.) for about 15 minutes at a temperature of 40°C, the correct temperature for this procedure. The solution is automatically drained and fresh solution is pumped into the boiler for another 15 minutes. After the entire solution has run through the system, clean the system by removing the water tank, rinsing it thoroughly, and filling it with fresh water. The clean water will automatically run through the system to rinse it. The machine will return to the starting condition.
- Remove key (33) and close the door. The machine is ready to dispense beverages again.

### Adjusting the specific weight of the soluble products:

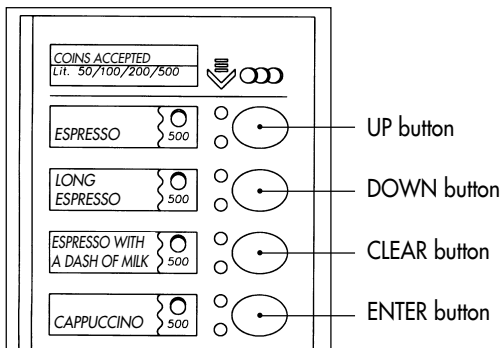


Fig. 18

- Always turn off the equipment before carrying out any operation on cables or specific weights of soluble products on hand at the time of programming. However, the machine allows you to re-program the specific weights to correspond with the soluble products being used in the machine.
- Once the "Access to special controls" procedure has been performed, press the ENTER button. The green LEDs corresponding to the last 3 products will light up. Hold a container (e.g. a cup) under a bin dispenser, press the button corresponding to a soluble product beverage and check the weight of the dispensed product. To calculate the average weight, perform several tests. The average value obtained should be entered with the 7P Programmer (see the Programmer instruction manual, paragraph 3.2).



Remove key 33 from the sensor switch to restore the safety mechanism.

## 10.2 Mixer fan blade replacement

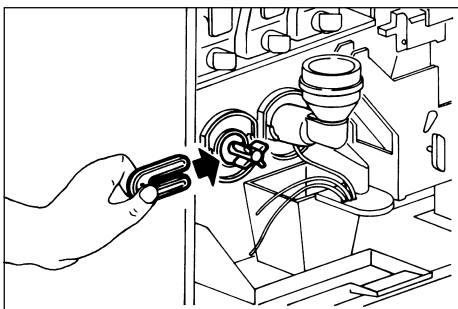


Fig. 33



Before starting this procedure, turn the machine off (main switch to position "0") and unplug the power cord.

Remove the old fan blade and assemble the new one onto the shank. Position the key on the fan flange, then press following the axial direction, until the key is flush with the motor flange (Fig. 33).

## 11 - PROPER DISPOSAL OF MACHINE

Disposal of machine parts must be carried out in accordance with local environmental regulations to avoid polluting earth, water and air. Please comply with the law in force in your country. The machine should be made non-functional by cutting the power cord. The non-functional machine should then be taken to a suitable collecting centre.

The manufacturer reserves the right to modify the contents of this manual without prior notification. It is strictly forbidden to copy in any way the contents of this manual, or any part thereof, without prior written permission from the manufacturer.

The translation of this manual into any other language is not allowed. The manufacturer shall not be held liable for any errors resulting from print or copy errors.