

**!** The filter must be replaced when signalled by the machine. See "Page 31".

**!** Before descaling, remove the filter from the tank.

INSTALLATION



Remove the filter from the packing container. Adjust the date to the current month.



Insert the applicator and turn it clockwise to secure it to the filter.



Check where the filter positioning and reference mark is.



Put the filter into the empty tank.



The reference must be positioned in correspondence with the groove.



Press until the end limit.



Turn the applicator counter-clockwise and remove it from the tank.



Fill the tank with fresh drinkable water.



Position a container beneath the steam tube and turn the machine on.



Press the button to dispense water.



Open the knob and dispense water.



Empty the water tank out at intervals.



When the tank is empty, fill it again with fresh drinkable water.

It is possible to use the machine without filter, Saeco suggests its use. If filter is not used, the machine must be descaled more frequently.

You can now use your coffee machine.

The user can change some machine operating parameters to suit his/her personal needs.

**PROGRAMMING START**

Procedure for accessing machine programming mode.



Turn the machine off.




Press the buttons together. Keeping the buttons pressed down, turn on the machine.


**WATER HARDNESS**

The hardness of tap water may vary depending on the region. For this reason, the appliance can be set according to the water hardness in the place where it is to be used, expressed on a scale of 1 to 4.



Dip the strip in water for 1 second.

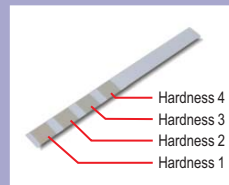

Check how many squares change colour.



Press the button to program the water hardness.

The appliance is factory set on a hardness value of 3\*. The setting should be adjusted according to the level of water hardness in the local area.



If the "Aqua Prima" filter has been installed in the machine, set the machine according to these indications. The degree of hardness will be signalled by the indicator lights.



If the "Aqua Prima" filter has NOT been installed, set the machine according to these indications. The degree of hardness will be signalled by the indicator lights.

Flashing

Flashing

Flashing

Steadily lit

Steadily lit

Flashing

## ADDITIONAL INFORMATION FOR CORRECTLY USING THE “AQUA PRIMA” FILTER.

Steadily lit

Please follow these simple instructions to correctly use the “Aqua prima” filter:

Flashing

1. Keep the “Aqua prima” filter cool and away from sunlight; the room temperature should be between +5°C and +40°C;
2. Do not use the filter in temperatures over 60°C.
3. If the coffee machine is not used for 3 days, we recommend washing the “Aqua prima” filter;
4. If the coffee machine is not used for more than 20 days, it is advisable to replace the filter.
5. To store an already opened filter, seal it in a nylon bag and keep in the fridge; do not store it in the freezer to avoid damaging the filter properties.
6. Before using the filter, leave it to soak in the water tank for 30 minutes.
7. Once it is taken out of its pack, do not keep the filter in the open air.
8. The filter must be replaced 90 days after opening the packing or after treating 60 litres of drinking water.

Steadily lit

Flashing