


## PROGRAMING OF THE DIFFERENT COFFEE QUANTITIES IN THE CUP

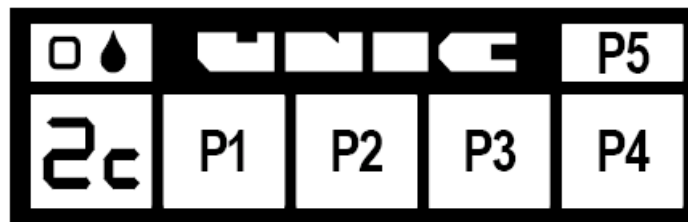


The keys from P1 à P4 can be programmed.

The multiple doses ( 1 , 2 ou 3 cups ) are calculated automatically from the programming of one of them on each box.

1	Set the machine switch to Position 0.												
2	Keep the key P5 pressed and put again the machine on. Display of Pn then Pc and Pr by pressing several times the key P5												
3	<p><b>Pc = CALCULATED PROGRAMMING</b></p> <p style="text-align: center;">Insert a filter-holder ( with coffee ) into the unit Install cups</p> <table border="1" style="width: 100%;"> <tr> <td style="width: 15%; text-align: center;">☞ P5</td> <td>Display Pc</td> </tr> <tr> <td style="text-align: center;">☞ P1 à P4</td> <td>Select the dose to be programed (2c for example)</td> </tr> <tr> <td style="text-align: center;">☞ P5</td> <td>Start the infusion cycle</td> </tr> <tr> <td style="text-align: center;">☞ P5</td> <td>Press again to stop when the amount of coffee desired is correct. Display of the corresponding digital value ( from 00 à 99 )</td> </tr> </table> <p style="text-align: center;">Repeat operation at 3 for the other doses ( 2C for example)</p>	☞ P5	Display Pc	☞ P1 à P4	Select the dose to be programed (2c for example)	☞ P5	Start the infusion cycle	☞ P5	Press again to stop when the amount of coffee desired is correct. Display of the corresponding digital value ( from 00 à 99 )				
☞ P5	Display Pc												
☞ P1 à P4	Select the dose to be programed (2c for example)												
☞ P5	Start the infusion cycle												
☞ P5	Press again to stop when the amount of coffee desired is correct. Display of the corresponding digital value ( from 00 à 99 )												
4	<p><b>Pn = DIGITAL PROGRAMMING</b></p> <p>Quick programming without coffee and/or values carried forward on other units.</p> <table border="1" style="width: 100%;"> <tr> <td style="width: 15%; text-align: center;">☞ P5</td> <td>Display Pn</td> </tr> <tr> <td style="text-align: center;">☞ P1 à P4</td> <td>Select the dose to be programed</td> </tr> <tr> <td style="text-align: center;">☞ P5</td> <td>Display of the digital value of the selected dose</td> </tr> <tr> <td style="text-align: center;">☞ P1</td> <td>Increase the value</td> </tr> <tr> <td style="text-align: center;">☞ P4</td> <td>Reduce the value</td> </tr> <tr> <td style="text-align: center;">⊞ P5</td> <td>Memorize the new value</td> </tr> </table> <p style="text-align: center;">Repeat operation at 4 for the other doses</p>	☞ P5	Display Pn	☞ P1 à P4	Select the dose to be programed	☞ P5	Display of the digital value of the selected dose	☞ P1	Increase the value	☞ P4	Reduce the value	⊞ P5	Memorize the new value
☞ P5	Display Pn												
☞ P1 à P4	Select the dose to be programed												
☞ P5	Display of the digital value of the selected dose												
☞ P1	Increase the value												
☞ P4	Reduce the value												
⊞ P5	Memorize the new value												
5	<p><b>Pr = MANUAL PROGRAMMING</b></p> <p>Same proceeding as in calculated programming Pc. The manual programming doesn't calculate the other doses ( 1, 2 or 3 cups), only the programed dose is modified. <b>Caution:</b> any new programming ( Pn or Pc ) cancel ALL previous programed values.</p>												
6	Wait until the program mode is automatically inactivated (from 10 to 15s), or switch off and on again the machine.												

## 2 CUPS ELECTRONIC BOXES (type d2)

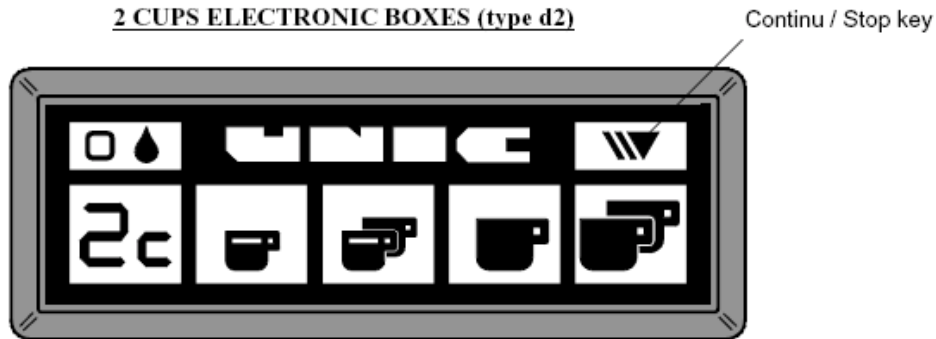

### 6.1a USE OF THE DOSES TO BE PROGRAMED

- 4 coffee doses and 1 manual function, Continu/Stop are available. During the infusion, it is displayed :
  - \* 1c or 2c = 1 or 2 small cups
  - \* 1C or 2C = 1 or 2 large cups
  - \* C- = Continu/Stop
- At any time you can change the selection by pressing another key.
- The dosage is automatic but the infusion can be stopped manually by pressing the key Continu/Stop.
- Programing: The multiple doses being computed, only two programing are necessary (1c or 2c) and (1C or 2C).

### 6.1b CONFIGURATION PARAMETERS

- \* dn / dt For the automatic calculation of the multiple doses  
dn = normal dosage  
dt = dosage with "Torino" kit
- \* C0 / C1 Chronometer for the infusion time  
C0 = no chronometer  
C1 = display of the infusion time
- \* A0 / A1 Authorization to program  
A0 = prohibited programing  
A1 = authorized programing

After switching on, the display shows the following information in order:

- The version number of the electronic memory: ex. r1
- The type of box: d2
- The active functioning parameters: ex. dn, CO, A1

### 6.1c MODIFICATIONS OF THE CONFIGURATION PARAMETERS

- Switch the machine off (switcher 0/1)
- Press simultaneously both keys P1 and P4, and in the same time, switch again the machine on
- Press the key P4 to change the selection (ex. dn or dt)
- Press the key P5 to change function (ex. dosage dn/dt or Chrono: C0/C1)
- Switch off to leave the configuration mode or wait the automatic leaving at the end of 10s.

### 3 CUPS ELECTRONIC BOXES (type d3)



#### 6.2a USE OF THE DOSES TO BE PROGRAMED

- 6 coffee doses and 1 manual function, Continu/Stop are available. During the infusion, it is displayed :
  - \* 1c, 2c ou 3c = 1, 2 or 3 small cups
  - \* 1C, 2C or 3C= 1, 2 or 3 large cups
  - \* C- = Continu/Stop
- At any time you can change the selection by pressing another key.
- The dosage is automatic but the infusion can be stopped manually by pressing the key Continu/Stop.
- Programing: The multiple doses being computed, only two programings are necessary (1c, 2c or 3c) and (1C, 2C or 3C). If it is necessary, the "Continu" dose can also be programed.

#### 6.2b CONFIGURATION PARAMETERS

- \* dn / dt For the automatic calculation of the multiple doses  
dn = normal dosage  
dt = dosage with "Torino" kit
- \* C0 / C1 Chronometer for the infusion time  
C0 = no chronometer  
C1 = display of the infusion time
- \* A0 / A1 Authorization to program  
A0 = prohibited programing  
A1 = authorized programing
- \* cc/cC/CC Start of infusion in small or large cup  
cc = always starts in small cups  
CC = always starts in large cups  
cC = keep the last selection : c or C

After switching on, the display shows the following information in order:

- The version number of the electronic memory: ex. r1
- The type of box: d3
- The active functioning parameters: ex. dn, CO, A1, CC

#### 6.2c MODIFICATIONS OF THE CONFIGURATION PARAMETERS

- Switch the machine off (switcher 0/1)
- Press simultaneously both keys P1 and P4, and in the same time, switch again the machine on
- Press the key P4 to change the selection (ex. dn or dt)
- Press the key P5 to change function (ex. dosage dn/dt or Chrono: C0/C1)
- Switch off to leave the configuration mode or wait the automatic leaving at the end of 10s.

Courtsey of  
**Services Unlimited, Inc./ Parts Guru**  
650 North Cannon Avenue, Lansdale, PA 19446  
Phone: 215-361-7000; Fax: 215-361-7434; e-mail: granita@rcn.com